

FEX08 Standard



Right Hand



120 mm XL Sight Glass


Product Characteristics

- Wall Mounted Core FOB.
- Made from Stainless Steel and Plexiglas.
- 5/8" Threaded Inlet & Outlet Ports.
- 80mm Sight Glass.
- Filter Top
- Max. Pressure: 4Bar/60psi

	FEX08	FEX08,sen	FEX08XL	FEX08XL,sen		Custom
80mm S/Glass	✓	✓				
5/8 Inlet tube	✓	✓				
120mm S/Glass			✓	✓		
5/8 Inlet tube XL			✓	✓		
5/8 Inlet tube XL	✓	✓	✓	✓		
Right Hand Base	✓	✓	✓	✓		
Left Hand Base	✓	✓	✓	✓		
Sensor		✓		✓		
Wall Mount	✓	✓	✓	✓		

CORE FOB INSTALLATION LIST

- Use competent installer.
- Use appropriate connections & tubes.
- Use recommended fixing screw.
- Do not exceed Maximum Beer line pressure.
- Use recommended Beer line cleaner.
- Do not use alcohol based cleaner on Sight glass

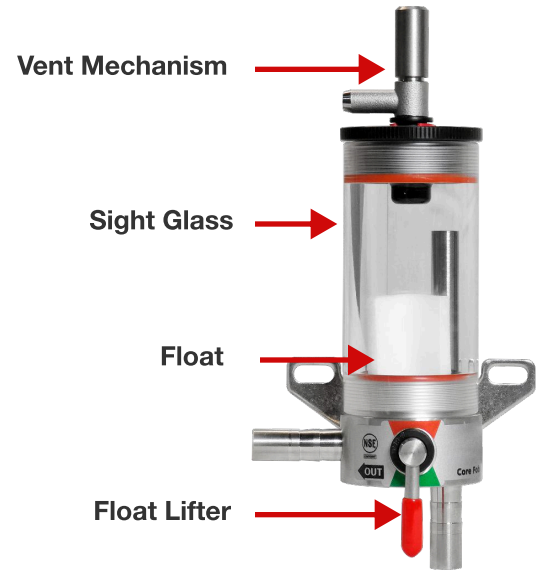

CORE FOB OPERATING User Guide

- (1) When the keg is empty disconnect the keg coupler and connect it to a full keg.
***Make sure that the Tap/Faucet is closed and that no dirt or grit can enter the beer line.**
- (2) Push **Vent Mechanism** down on top of CORE FOB until **Sight Glass** is full of beer and no bubbles appear in the Sight Glass or in the **Product Lines**.
Only Use Recommended Soft PVC Tube on Vent Exit (6x9).
- (3) Rotate **Float Lifter** on the CORE FOB base into **RED** (By Pass) area to lift the float and then rotate back into the **GREEN** area.
 - Taking these steps **Out of Order** will result in **Foamy Beer!**
 - **Always close Tap/Faucet before connecting to new Keg.**
 - **When inserting Float Lifter ensure Lever is facing down.**

Procedure For Beer Line Cleaning

During periodic cleaning of beer lines rotate Float Lifter into the RED area for By Pass. Hold the Vent Mechanism down to allow the cleaning solution to flow through the Vent Mechanism and the Drain Line. Rinse the vent with clean water after washing. Upon completion of line cleaning ensure FOB has been filled with fresh beer with no bubbles appearing in the Sight Glass or Product Lines. Rotate Float Lifter on FOB to GREEN to allow beer dispense. Clean exterior with warm water and damp cloth.

CORE FOB Cleaning Guide

1. Push & Hold Connector
2. Pull Out Vent
3. Push & Hold Connector
4. Pull Out Lifter
5. Loosen & Unscrew Top from Sight Glass
6. Loosen & Unscrew Sight Glass from Base
7. Remove Float
 - Clean & Brush all parts with appropriate tools (like bottle brushes etc.).
 - Only use recommended cleaning chemicals.
 - Do not use alcoholic spray-on liquids.

